


HEAVY DUTY PUNCH - 1620M


HOW TO REPLACE PUNCHES

INSTRUCTION MANUAL


FIRST LOCK THE HANDLE THEN REMOVE PLASTIC COVER BY THE HELP OF SCREW DRIVER AS SHOWN IN FIG. (i)

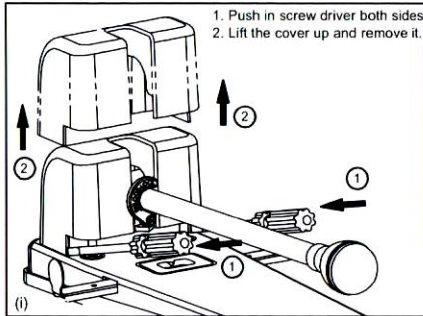


TILT THE MACHINE (APPROXIMATE-15°) & REMOVE THE LOCKING PIN AS SHOWN IN FIG. (ii)

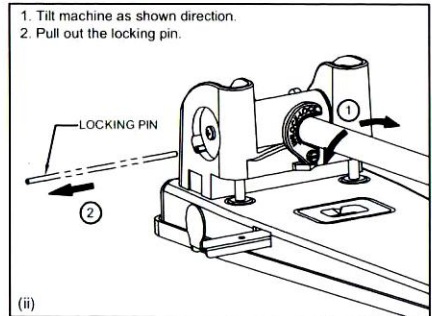

UNLOCK THE HANDLE & TURN IT FULLY BACKWARD AND PULL OUT THE WORN OR BROKEN PUNCHES AS SHOWN IN FIG. (iii)

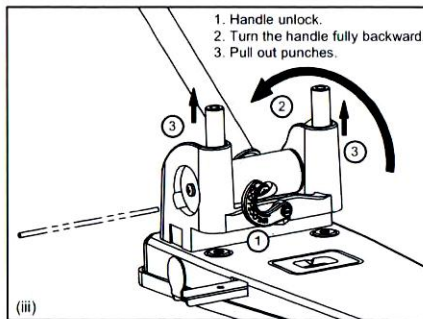

INSERT NEW PUNCHES AND TURN THE HANDLE TO FRONT SIDE, ENSURE BOTH THE PUNCHES ARE MOVING WITH EQUAL HEIGHT AS SHOWN IN FIG. (iv)

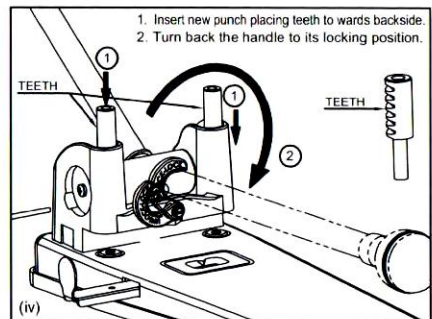

INSERT THE LOCKING PIN IN ITS POSITION. PUSH THE PLASTIC COVER DOWN UNTIL IT GETS LOCKED WITH A CLICK. NOW YOUR MACHINE IS READY TO USE.

■ SPECIFICATIONS -

- Punching capacity ----- 160 sheets of 55 kg. PPC Paper
- Punching Holes size ----- 6 mm
- Punching Distance ----- 8 cm. & 8 x 8 x 8
- Size ----- L 412 X W 128 X H 112
- Net Weight ----- 2.50 kg (Approx)

▲ CAUTION -

- AVOID PUSHING FINGERS AROUND PUNCHES AREA TO AVOID INJURY.
- DO NOT PUNCH ON BOARDS, VINYL OR CLOTH COVERED PAPER.
- DO NOT APPLY JERK TO PUNCH PAPERS TO AVOID DAMAGE.
- EXCLUSION OF LIABILITY IN CASE OF INCORRECT HANDLING.
- REMOVE STAPLE OR PINS BEFORE PUNCHING PAPER.

• The specifications of our products are subject to change without prior notice because of our continuous efforts to improve the quality.